



# *AV Party Rentals*

**EVERYTHING FROM TEASPOONS TO TENTS - SINCE 1968**

800-362-8389 661-259-2151 818-362-8389 (FAX) 661-259-0133  
www.AVParty.com

## **Hot Dog Steamer**

### **Operating Procedure**

1. Plug cord into a 120 volt AC grounded electric outlet only. This rental item must be used on an isolated electrical circuit. This item will not operate properly on a shared circuit.
2. Remove the Hot Dog Basket and Juice tray and add approximately ten quarts (no more) of water into the heating compartment so that the water level is above the heating element. Using hot water will reduce the heating time.
3. Place tray and partition into unit and put wire compartments into place.
4. Place Hot Dogs in small compartment and Buns in the wire rack in the large compartment. Arrange the Hot Dogs and Buns so that there is free circulation of steam.
5. Turn the switch to "ON" position, and set the thermostat control on "HIGH" until steam is generated.
6. For normal operation set the thermostat control in the center of range between "Low" and "High".
7. The steaming compartments have been designed to deliver the proper amount of steam in each compartment. No adjustments are necessary.
8. Keep the lids closed while not serving.
9. ADD MORE WATER AS NECESSARY TO MAINTAIN THE WATER LEVEL. Add hot water if possible.

### **Water Level Flasher**

For your convenience, the Deluxe Steamin' Demon is equipped with a water level float and flasher to warn you when the water level is low and the steamer needs to be refilled. When the flasher begins to flash, refill the steamer with approximately six quarts of clean water. Be sure not to overfill the steamer.

### **Care and Cleaning Instructions**

1. Unplug the unit's power cord from the outlet.
2. Remove any remaining Hot Dogs and buns.
3. Drain the water through the drain pipe.

**CAUTION: water may be hot, allow cooling to avoid burns.**