



AV Party Rentals

EVERYTHING FROM TEASPOONS TO TENTS - SINCE 1968

800-362-8389 661-259-2151 818-362-8389 (FAX) 661-259-0133

www.AVParty.com

SNOKONE MACHINE



The Sno-kone Machine is a great attraction For Birthday Parties, School Functions, etc. It is very a very simple machine to operate, but in order to get the best results, please read the following BEFORE you attempt to operate the machine.

IMPORTANT INFORMATION

The Sno-kone Machine consists of the motor, shaving unit, and dispensing case. The motor has a toggle switch mounted on it. There is a separate switch on the light inside the case.

On the end of the motor shaft is mounted the cutterhead which is inside the shaver body (gooseneck). Going down into the shaver body is the pusher handle, which presses the ice against the revolving cutterhead, which shaves the ice. CAUTION: Machine must be properly grounded to prevent shock in case of electrical problems. The motor is 110 volt, single phase, 60 cycles, and AC current. Plug cord into a 120 volt AC grounded electric outlet only. This rental item must be used on an isolated electrical circuit. This item will not operate properly on a shared circuit.

TO OPERATE MACHINE

1. Start the motor and fill the gooseneck with ice cubes or block ice broken into pieces 3" to 4" in size. Fill to about an inch or so from the top, the larger the piece of ice the better the snow.
2. Push the pusher handle down to press the ice against the cutterhead. A firm even pressure is all that is required, but sometimes you will find it better to relieve the pressure two or three times on the way down. This lets the ice rearrange itself and you get a better bite.
3. DO NOT FORCE THE HANDLE too much as motor could be stalled.
4. When too much pressure is necessary, relieve the handle, and then come down again. Too much pressure on the pusher handle will make the ice come out coarse; too little pressure makes the ice mushy.

In normal operations the motor gets warm – a surface temperature of 150° is normal.

CAUTION

Do not let any metal get down in the gooseneck, or you will ruin the blades.

Never put your fingers or any object into the shaver body while the motor is running. Disregard for these instructions and careless handling will result in accidents and/or injury. If problems not covered occur, contact your professional party rental center immediately.

CLEANING

Always unplug the machine before cleaning. Wipe all surfaces clean before returning to the rental center and AVOID ADDITIONAL CLEANING CHARGES.

REMEMBER, you are renting this equipment. Be sure your rental center explains the terms of your rental contract so that you are familiar with any damage or additional cleaning charges.

*Complete your party by renting: Tables, chairs, silver service, china, linen, etc.
Also Purchase: Paper and/or plastic party accessories*

24330 San Fernando Road

Newhall, CA 91321

www.avparty.com